



	spare part no
① OVERHEAT THERMOSTAT	362406
③ RADIATION ELEMENT	369007
⑤ GASKET FOR T4 THERMO ELEMENT	364015
⑦ GLOW PLUG	362502
⑨ FUEL PIPE	367306
⑪ CONTROL UNIT	(SN → 3137) 361028 (SN 3138 →) 361045
⑬ COMPLETE MAIN BLOWER 40D	(SN → 3137) 365407 (SN 3138 →) 365408
⑮ HEAT EXCHANGER 40D	368506
⑰ FUSE 5 A	(SN → 3137) 362108
FUSE 7,5 A	(SN 3138 →) 362112

	spare part no
② BURNER CYLINDER, COMPLETE	369025
④ BOTTOM MAT, Ø 85 MM	364023
⑥ GASKET FOR GLOW PLUG	364110
⑧ THERMO ELEMENT	362601
⑩ MOTOR, AXLE 2,5 MM	365108
⑫ FUEL PUMP, FC 5	367505
⑭ MAIN BLOWER MOTOR	(SN → 3137) 365106 (SN 3138 →) 365111
⑯ FUSE 15 A	362110
○	